
2-by-12 zSFP+™ Insertion Tool



# **Application Tooling Specification Sheet**

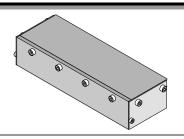

Order No. 62202-5280

# **FEATURES**

- Lightweight tool used in the insertion of a zSFP+™ connector in a PCB
- Inserts connector to a PCB without damage to the board
- Use tool 62202-5290 for removing connectors
- PCB support not included (furnished by customer)


### **SCOPE**

<u>Products</u>: zQuad Small Form-factor Pluggable Plus (zSFP+™) Cage Assembly, with Elastomeric Gasket or Metal EMI Gasket, 2 by 12 Enhanced EMI Cage Construction.


Connector Series No.	Connector Order No.					
170071	170071-1201	170071-1211	170071-1212	170071-1213	170071-1214	170071-1215
171846	171846-1201	171846-1211	171846-1212	171846-1213	171846-1214	171846-1215

#### Notes:

- 1. See the following pages for tooling operation instructions.
- 2. These tools require a "Keep Out Zone" around the connector free of components. The right and left sides should be 0.08" (2mm). The rear of the connector should be .197" (5.0mm). See Figure 1.

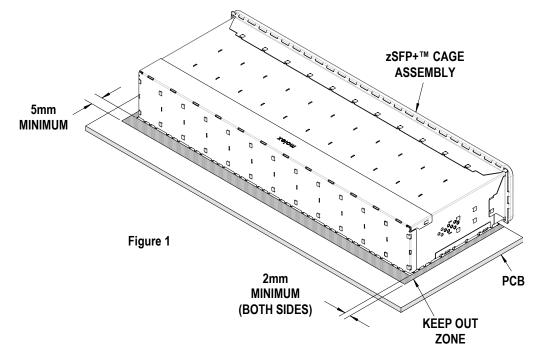


Doc. No: ATS-622025280 Release Date: 09-13-13 Revision: B Revision Date: 10-17-14

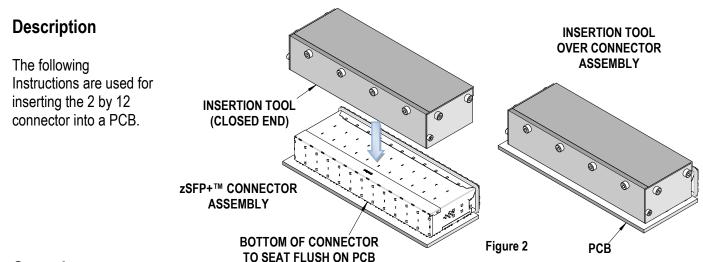

# Operation

- 1. Place a connector assembly on the PCB.
- 2. Place the tool on the connector assembly (closed end to the back end of the connector). See Figure 2.
- 3. Place tool, connector, and PCB, in a press of suitable size and force, and seat the connector assembly as shown. The support plate (furnished by the customer) under the PCB must have clearance for the connector pins as they pass through the PCB.

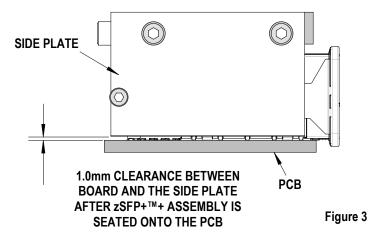

#### Clearance

Use this tool only with a press that has a pre-determined shut height when seating a zSFP+™ Assembly on a PCB. See figure 3. Allowing the Press-In Tool to stop on the board will result in damage the zSFP+™ cage and terminals being over seated.

**CAUTION**: Molex application tooling specifications are valid only when used with Molex connectors and tooling.

## **Contact Information**

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Visit our website at http://www.molex.com

**UNCONTROLLED COPY** Doc. No: ATS-622025280 Release Date: 09-13-13 Page 2 of 2